



Shandong Chambroad Timber Material Co., Ltd. | **Address:** Economic Development Zone, Boxing County, Shandong Province, China | **Email:** info.timber@chambroad.com





Cladding Installation Instruction

Installation instruction for Chambroad Timber cladding

1. Pre-installation preparation

1.1 Select a wall with a flat surface. If it is uneven, perform wall treatment.

1.2 Fasten the wooden joist to the wall with expansion screws.

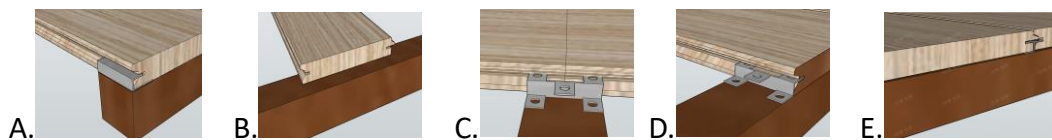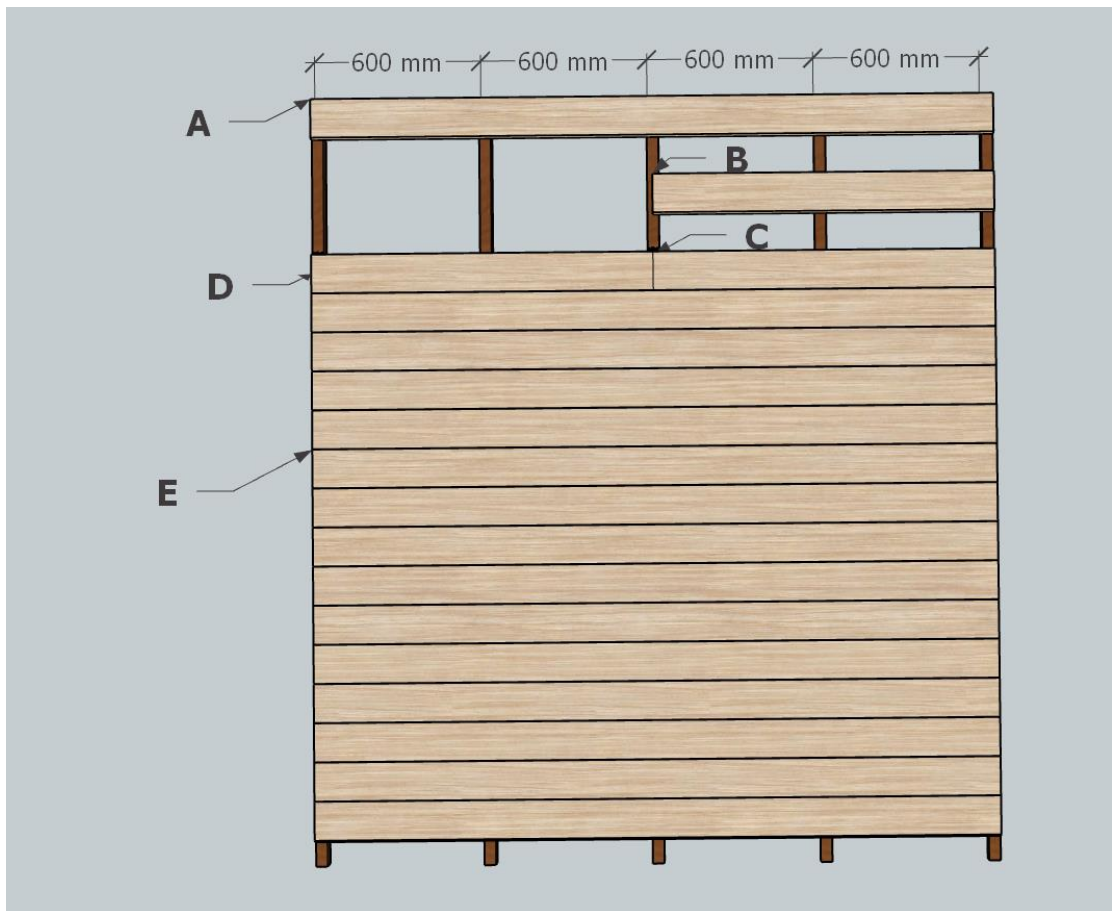

Starting Buckle Apply end Sealer End Splicing Clip installation Assembly method

1.3 There is a distance of at least 40mm between the cladding and the wall surface

(the cross-section size of the wooden joist is 40mm*40mm).

1.4 For end mounting, the end portion can be installed without gaps, and the cladding can be installed horizontally or vertically.

1.5 When installing the cladding on the joist, the center distance between the two adjacent joist is 600mm.

1.6 To ensure the stability of the cladding, the cut surfaces of the cladding need to be sealed and protected with an end sealer.

1.7 About 15 clips are used per square, for the cladding width of 145mm.

1.8 Use only the supplied 304 stainless steel clamp screws. (4.2*30mm)

2. Notes

Chambroad timber materials are natural wood processed through the chambroad timber process to achieve high stability of the material. When used outdoors, due to ultraviolet rays and changes in temperature and humidity, depending on the intensity of local ultraviolet rays and temperature and humidity changes in the degree of intensity, prompting the surface color of the board by ultraviolet aging and fading gray.

3. Installation

3.1 Starter buckle installation

Fix the starting fastener to the joist by measuring with a horizontal laser instrument to ensure that the cladding is parallel to the ground.

3.2 Fixed cladding panel

The product is installed from bottom to top for insertion, the first panel female tenon is fixed to the joist with a start buckle, the male tenon with beveled end is fixed to the joist using stainless steel I-beam clips, the second plate female tenon is inserted into the male tenon of the start plate, the male tenon with beveled end

is fixed to the joist using stainless steel I-beam clips, and the rest are installed in an analogous manner.

4. maintenance after installed

If the cladding is uncoiled, you need to brush a layer of protective oil on the surface after the installation is completed, to play a protective role for the cladding.