





Shandong Chambroad Timber Material Co., Ltd. | **Address:** Economic Development Zone, Boxing County, Shandong Province, China | **Email:** info.timber@chambroad.com



Lumber Installation Instruction

Installation instruction for Chambroad Timber lumber

1. Installation steps

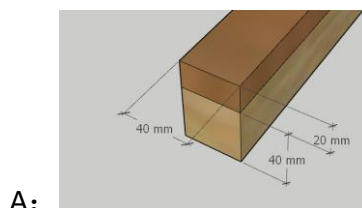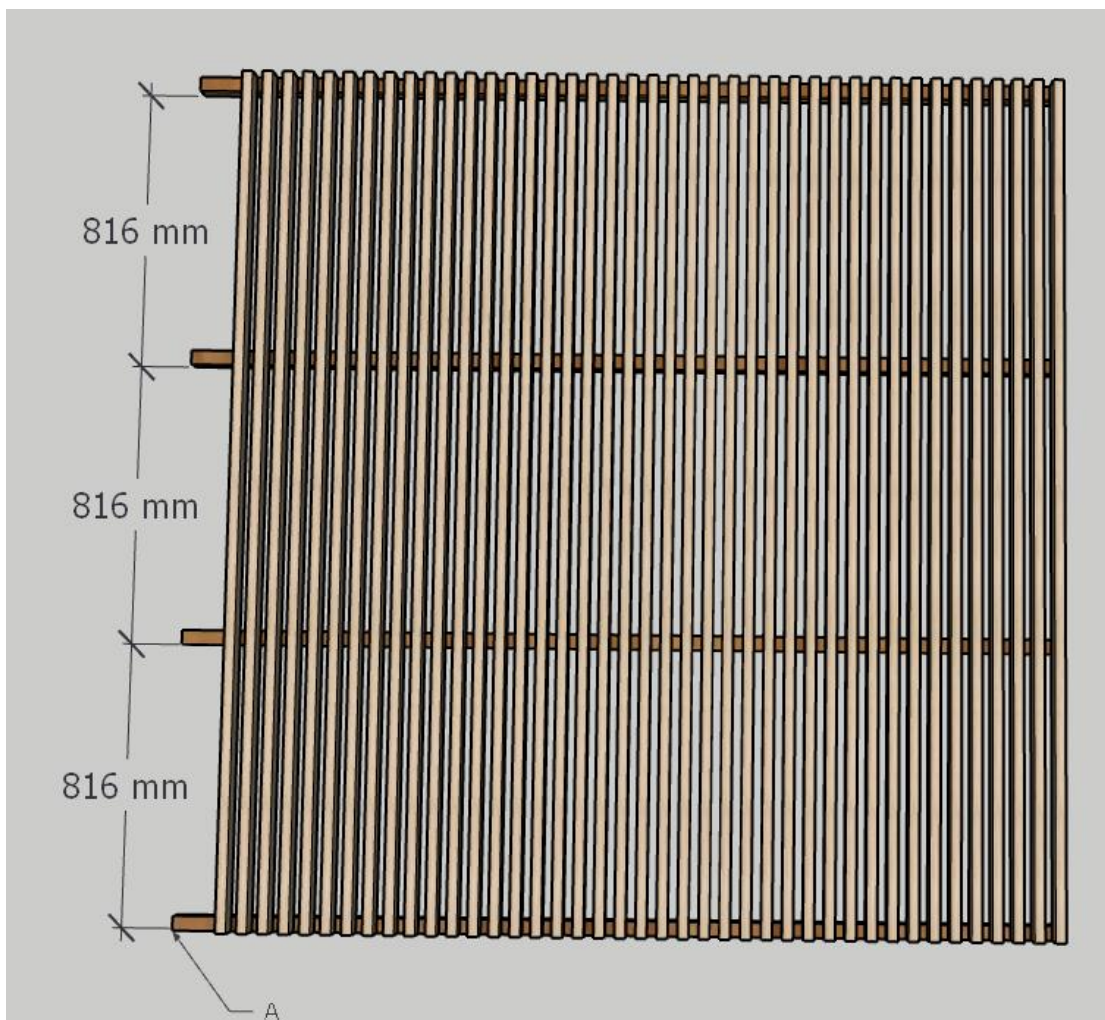

1.1 Firstly, determine the space size for installing lumber. Then determine the required number and size of wooden joists based on the lumber.

1.2 Ensure that the wall is flat and unobstructed. If it is necessary to install on a wooden beam, ensure that the beam installation is stable.

1.3 According to the size, assemble the lumber. Then use glue and self-tapping screws to fix the lumber (30*70 mm) and the back strip (20*40 mm) at the back. The center distance between the two adjacent back strips is 816 mm to ensure that all connections are stable and reliable.

1.4 Fix the joist on the flat wall which size is 40*40mm. Determine the joist position according to the installation position of the lumber. Connect the back strip to the joist by using an electric drill and self-tapping screws to ensure that the lumber is completely fixed with the joist.

2. Notes

2.1 Chambroad timber lumber is a natural wood material that achieves high stability through wood-based processing technology.

2.2 Chambroad timber is made of nature wood, retaining the color and texture of native wood.

2.3 After installation, it is necessary to check the installation effect to ensure that the lumber is installed smoothly and without any shaking.

2.4 During the installation process, pay attention to safety, especially when using electric tools, and comply with relevant safety regulations.

2.5 After installation, it is necessary to regularly check the firmness of the system. If there is any looseness or damage, it should be dealt quickly.