




Shandong Chambroad Timber Material Co., Ltd. | **Address:** Economic Development Zone, Boxing County, Shandong Province, China | **Email:** info.timber@chambroad.com



Soffit Installation Instruction

Installation instruction for Chambroad Timber soffit

1. Installation steps

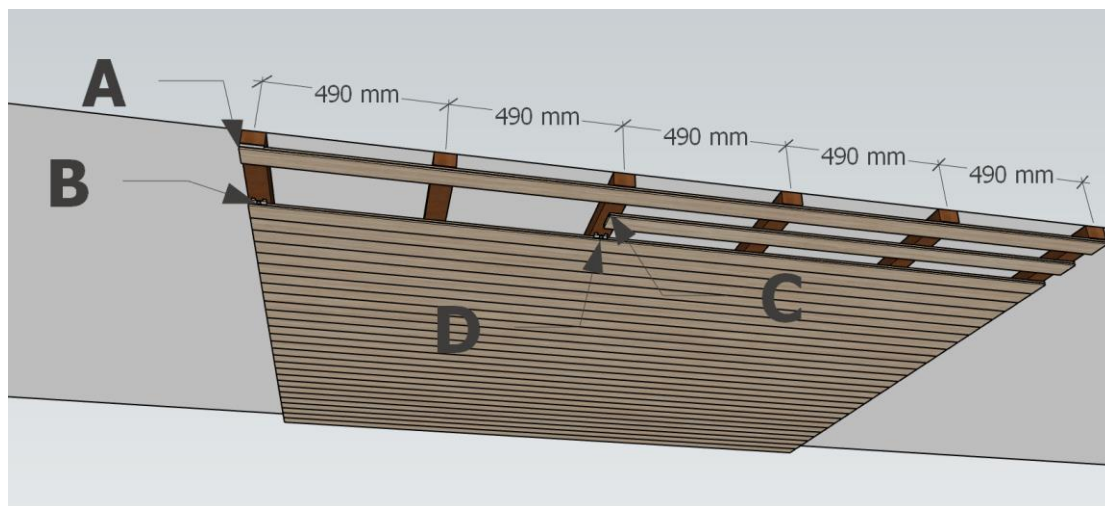

A.

Starter buckle



B.

fastener installation



C.

Apply sealant



D.

Splicing joint

1.1 Measure the size of the roof and determine the position and spacing of the soffit joist. Generally, the spacing between soffit joists is controlled at around 490mm to ensure the stability and load-bearing capacity of the soffit.

1.2 The size of soffit joist is 40*40mm. Firstly, fix the soffit joist on the top of the wall, ensuring that the joist is horizontal and vertical.

1.3 Install a Chambroad timber soffit on the joist with a fastener which cross-sectional size is 13*70mm. Place the soffit in the predetermined position and spacing on the joist, then fix the soffit with fastener, and pay attention to maintaining the horizontal and vertical position of the soffit.

1.4 To ensure the stability of the soffit panel, the cutting surface of the panel needs to be sealed and protected with end sealer.

2. Precautions

2.1 Chambroad timber is a natural wood material that achieves high stability through Chambroad Timber processing technology.

2.2 Chambroad timber is made of nature wood, has the color and texture of nature wood.

2.3 After installation, it is necessary to check that the soffit is installed flat and without shaking. If necessary, wooden glue and self-tapping screws can be used to fix it.

2.4 During the installation process, pay attention to safety, especially when using electric tools, and comply with relevant safety regulations.

2.5 After installation, it is necessary to regularly check the firmness of the soffit. If there is any looseness or damage, it should be dealt with in a timely manner.

3. Installation

3.1 Fix the first panel of the soffit by using the starting buckle. After fixing the first panel, install the fastener according to the position of the joist. Insert the fastener into the soffit groove for fixation, then insert the second panel into other side of the fastener, and so on.

3.2 Approximately 30 fasteners are used per square meter for boards with a width of 70mm.

3.3 Please use the accompanying 304 stainless steel clamp screws (4.2*25mm).